



## **BEST IN CLASS PROTECTION FOR YOUR COMMERCIAL TRUCK**

Transporting goods across the country is stressful and having your truck break down can make things far more stressful. A mechanical breakdown of your truck can be extremely expensive, time consuming, and can impede your livelihood. With a Medium Truck Protection Plan from Veritas, we take that stress away!

With a Veritas protection plan, on covered repairs, we we pay the bill (minus a small deductible) to fix or replace the parts that broke and offer you best-in-class roadside assistance—including towing. Buying a commercial truck is an important investment. Don't make a huge investment without protecting it! For collisions, you have collision insurance. For mechanical breakdown protection, you have Medium Truck Protection Plans from Veritas.

---

**All of our protection plans are accepted  
at repair facilities throughout the United  
States and Canada.**

*\*Please see section "WHAT TO DO IN THE EVENT OF A  
BREAKDOWN" of your contract for full details*

**Protection plans may only be used in United  
States and Canada.**



**Veritas**  
Global Protection

## **MEDIUM TRUCK PLANS**



### **Veritas Global Protection Services, INC**

60 Atlantic Avenue, Suite 200  
Toronto, ON M6K 1X9

**(888) 222-3020 | [www.veritasglobalprotection.ca](http://www.veritasglobalprotection.ca)**

HT45CAD

Rev. 050123

*Peace of Mind, Worldwide*  
[veritasglobalprotection.ca/Mediumtruck](http://veritasglobalprotection.ca/Mediumtruck)



# MEDIUM TRUCK PLANS

## Benefits & Features

### Veritas MEDIUM TRUCK Plans

#### ✓ 24 Hour Emergency Roadside Assistance

We pay for the cost of emergency roadside services, including:

- Towing (\$550 Benefit Per Occurance)
- Pull Start
- Jump Start
- Lock-Out Service
- Replacement Battery Delivery

#### ✓ Fully Insured

All of our protection plans are fully insured through a Contractual Liability Insurance Policy ("CLIP") issued by an "A-" rated insurance carrier or better on the AM Best insurance rating index.

#### ✓ Nationwide Protection

All of our plans can be used nationwide, so if you are traveling and experience a breakdown, you can rest assured we work with repair facilities and dealerships throughout the United States and Canada.



## Compare Coverage Levels →

Refer to our comparison chart on right to find the best Veritas Medium Truck Plan for your vehicle.

	POWERTRAIN	DELUXE PLUS*	PREMIER PLUS*
<b>engine</b>			
<b>Premier and Deluxe cover:</b> Cylinder Block, Cylinder Head(s), Rotary Housing and all Internally Lubricated Parts contained within the engine including: Pistons; Piston Rings; Connecting Rod Bearings; Crankshaft; Crankshaft Main Bearings; Camshaft; Camshaft Bearings; Cam Followers; Timing Chain or Belt; Timing Gears, Guides, Tensioners; Rocker Arms; Rocker Shafts; Rocker Bushings; Cylinder Head Valves; Valve Guides; Valve Lifters; Valve Springs; Valve Seals; Valve Retainers; Valve Seats; Push Rods; Water Pump; Fuel Pump; Oil Pump and Oil Pump Housing; Harmonic Balancer; Oil Pan; Timing Chain Cover; Intake and Exhaust Manifolds; Valve Covers; Engine Mounts; (The oil pan and valve covers are only covered if damaged by the Breakdown of a Covered Part).			
<b>Powertrain, Powertrain Plus, and Powertrain Enhanced cover:</b> Pistons, piston rings, crankshaft and main bearings, connecting rods and rod bearings, camshaft and camshaft bearings, timing chain and timing gears, intake and exhaust valves, valve springs, oil pump, push rods, rocker arms, hydraulic lifters, rocker arm shafts and water pump. The engine block and/or cylinder heads are also covered if the above-listed parts cause a Breakdown of the engine block and/or cylinder heads.			
<b>transmission/transaxle</b>			
All internally lubricated parts of Manual or Automatic Transmissions, including oil pump, drums, planetaries, sun gear and shell, shafts, bearings, side gears, carrier pinion gear, ring gear, shift rail, forks, synchronizers, and Torque Converter. Breakdown of the Transmission/Transaxle case is covered only if caused by the failure of an internally lubricated covered part.			
<b>transfer case</b>			
All internally lubricated parts of the 4 x 4 Transfer Case. Breakdown of the Transfer Case is covered if caused by the failure of an internally lubricated part.			
<b>drive axles</b>			
<b>Premier and Deluxe cover:</b> (Front and Rear) Drive Axle Case; All Internally Lubricated Parts contained within the Drive Axle; Locking Hubs; Drive Shafts; Center Support Bearings; Universal Joints; Constant Velocity Joints; Axle Bearings; Four-Wheel Drive Actuator; and Differential Cover. (The drive axle housing is only covered if damaged by the Breakdown of a Covered Part.)			
<b>Powertrain, Powertrain Plus, and Powertrain Enhanced cover:</b> All internally lubricated parts. Drive axle housing is also covered if damage is caused by Breakdown of an internally lubricated part.			
<b>turbo / supercharger (factory only)</b>			
All internally lubricated parts of the factory installed turbocharger/supercharger. The turbocharger/supercharger housing is covered if the internally lubricated parts cause a Breakdown of the turbocharger/supercharger housing.			
<b>air conditioning / heating system</b>			
<b>Premier and Deluxe cover:</b> Condenser; Compressor, Compressor Clutch and Pulley; Air Conditioning Lines and Hoses; Evaporator; Idler Pulley and Idler Pulley Bearing; High/Low Compressor Cut-Off Switch; Expansion Valve; and Pressure Cycling Switch. The following parts are also covered if they are required in connection with the repair of a Covered Part listed above and only if they have failed: Accumulator/Receiver Dryer; Orifice Tube; Oil and Refrigerant.			
<b>Powertrain Plus and Powertrain Enhanced cover:</b> Condenser, compressor, and evaporator. Orifice Tube and Accumulator/Receiver Dryer is also covered if required in connection with the repair of a covered part listed above.			
<b>suspension</b>			
Upper and Lower Control Arms, Control Arm Shafts and Bearings or Bushings, Upper and Lower Ball Joints, Radius Arm and Bushings, Torsion Bars, Mounts and Bushings, Stabilizer Bar, Links and Bushings, Struts, Strut Bearing Plates, Spindle and Spindle Support, Wheel Bearings, Pannard Bar, Track Bar, Suspension Bumpers, Leaf Springs, Leaf Spring Shackles and Hardware, Load Assist Shocks, Shocks, Load Assist Springs, and Coil Springs. Variable Dampening Suspension: Compressor, Control Module, Dampening Actuator, Solenoid, Struts, Height Sensor, and Mode Selector Switch.			
<b>steering</b>			
All Internally Lubricated Parts contained within the Steering Box; Rack and Pinion Gear, Power Steering Pump, Power Steering Hoses, Steering Knuckles, Pitman Arm, Idler Arm, Tie Rod Ends and Drag Link, Steering Damper, Upper and Lower Steering Column Shafts and Couplings, including Internal Tilt-Wheel Mechanism, Steering Box and Rack and Pinion Gear Housings, Power Steering Assist Cylinder, Power Steering Pump Cooler, Twin "I" Beam & Bushings, Steering Travel Stop, Rear Wheel Steering, Rear Steering Shaft and Couplings, Power Cylinder and Pump, Electronic Control Unit/Solenoid, Phase Control Unit, Stepper Motor, Steering Box, Control Valve, Rack, and Tie Rod Ends.			
<b>cooling system</b>			
<b>Premier and Deluxe cover:</b> Engine Cooling Fan and Motor; Fan Clutch; Belt Tensioner; Radiator; Heater Core; Thermostat; Blower Motor; Hot Water Valve; Engine Oil Cooler; Cooler Lines and Fittings.			
<b>Powertrain Enhanced covers:</b> Cooling Fan; Cooling Fan motors; and fan clutch.			
<b>fuel system</b>			
<b>Premier and Deluxe cover:</b> Fuel Injection Pump and Injectors; Vacuum Pump; Fuel Tank; Fuel Tank Sending Unit; Metal Fuel Delivery Lines; Fuel Pressure Regulator; and Fuel Tank Switching Unit/Switch.			
<b>Powertrain Enhanced covers:</b> Fuel Pump; fuel injection pump; metal fuel lines; fuel pressure regulator; fuel sending unit; and fuel gauge.			
<b>brake system</b>			
Master Cylinder, Power Brake Cylinder, Vacuum/Hydro Assist Booster, Disc Brake Caliper, Wheel Cylinders, Compensating Valve, Brake Hydraulic Lines and Fittings, Hydraulic Control Unit, Hydraulic Trailer Brake Assembly and its Components. The following ABS Parts are also covered: Electronic Control Processor, Wheel Speed Sensors, Hydraulic Pump/Motor Assembly, Pressure Modulator Valve/Isolation Dump Valve and Accumulator.			
<b>electrical</b>			
Alternator, Voltage Regulator, Heater Fan, Starter Motor, Starter Solenoid, and Starter Drive.			
<b>enhanced electrical</b>			
<b>Premier, Deluxe, and Powertrain Enhanced Plans Cover:</b> Power window motors and regulator; power door lock actuators; power truck switch; and power antenna motor.			
<b>Premier and Deluxe plans also cover</b> numerous other electrical and enhanced electrical components.			
<b>seals and gaskets</b>			
Seals and gaskets are covered in connection with the replacement of a covered component.			
<b>exclusionary</b>			
An exclusionary plan is written so that the plan states everything is covered but a small list of excluded items.			

\* Premier Plus and Deluxe Plus plans become powertrain plus coverage at 100,000 miles on your vehicle's odometer. Premier Full Term and Deluxe Full Term maintain the original level of coverage throughout the duration of the contract.

POWERTRAIN

DELUXE PLUS\*

PREMIER PLUS\*

